

## NFC DRIVER ID INSTRUCTIONS

Please follow these simple instructions for the day to day operation of your RF Driver ID Fob or Sticker.

---

**IT IS IMPORTANT THAT YOU TOUCH THE DRIVER KEY AGAINST THE RECEIVER PRIOR TO STARTING THE VEHICLE. THIS WILL DEACTIVATE THE INTERNAL PIEZO ALARM SITUATED WITHIN THE VEHICLE.**



With the vehicle ignition OFF touch

Your “RF Driver ID Key” against the RF Receiver located on your vehicles dashboard.

You will hear a SINGLE tone that confirms that your Driver ID key has been accepted and recognised.

Once you hear the confirmation tone, your identity will be registered in the system and you can now start your vehicle.



NFC Receiver

**PLEASE ENSURE THE FOB IS TOUCHED AGAINST THE RECEIVER TO REGISTER CORRECTLY**

If using the NFC Driver ID sticker, please attach it to an existing RF ID pass or something that you carry while you are driving.

**PLEASE KEEP YOUR NFC DRIVER ID KEY AWAY FROM WATER.**